# ZWCAD+ Quick Reference

# **1. ZWCAD+ product line**

# **1.1.Versions of ZWCAD+**

ZWCAD+ has three commercial versions and two dedicated versions for academic users and developers. As shown below

For commercial users				
ZWCAD+ Standard	ZWCAD+ Professional	ZWCAD Mechanical		
Fundamental	Fundamental	Fundamental		
LISP	3D Module	3D Module		
	API	API		
		Mechanical Module		
Fundamental 2D drafting features and full LISP	Fundamental 2D drafting features, 3D module and a full set of APIs including LISP, VBA, ZRX and SDS	Identical to ZWCAD+ PRO and enhanced by a full set of value-added tools and libraries for mechanical industry		
ZWCAD+ Standard	ZWCAD+ Professional	ZWCAD Mechanical		

- ZWCAD+ Standard has the fundamental 2D drafting features and full LISP support.
- ZWCAD+ Professional has the fundamental 2D drafting features, 3D viewing and editing module and a full set of APIs including LISP, VBA, ZRX and SDS.
- ZWCAD Mechanical is based on ZWCAD+ Professional and enhanced by a full set of value-added tools and libraries for mechanical industry.

# **1.2.System Requirement**

**Recommended System Requirements** 


- ✓ Microsoft Windows XP SP2 or higher/Vista/7/Server2003/Server2008
- ✓ All CPUs on supported hardware
- ✓ 1G RAM
- ✓ 1.5GB free disk space
- ✓ 1024 x 768VGA display with True Color
- ✓ 128MB graphics card
- ✓ Microsoft Internet Explorer 7.0 or later
- ✓ Install from download or CD

# 1.3.Comparison with ZWCAD /AutoCAD

	ZWCAD+ <mark>VS</mark> ZW	<b>CAD</b>	VS A	utoC	AD		
	Features	ZWCA	D+ 2012	ZWCAD	D 2012	AutoCA	AD 2012
	reatures	Pro	Std	Pro	Std	Full	LT
	Dual-core utilization	-√*	-√*	×	×	$\checkmark$	$\checkmark$
	DWG version 2.5 to 2012					$\checkmark$	
General	Ribbon	√*	-√*	×	×	$\checkmark$	$\checkmark$
General	Multiline	$\checkmark$	$\checkmark$	$\checkmark$		$\checkmark$	×
	Drawing tabs	$\checkmark$	$\checkmark$	$\checkmark$		×	×
	SmartMouse	√*	-√*	×	$\times$	×	×
	Associative dimensions	√*	-√*	$\checkmark$		$\checkmark$	$\checkmark$
	Leader & Qleader	$\checkmark$	$\checkmark$	$\checkmark$			$\checkmark$
Annotation	Table (import&export, table style)	$\checkmark$	$\checkmark$			$\checkmark$	$\checkmark$
	Text and Mtext	$\checkmark$	$\checkmark$	$\checkmark$			$\checkmark$
	Field	√*	-√*	$\checkmark$			$\checkmark$
	Layer manager	$\checkmark$	$\checkmark$	$\checkmark$			$\checkmark$
Layer	Layer translator		$\checkmark$	$\checkmark$		$\checkmark$	×
	Layer previous	∿*	√*	$\times$	$\times$	$\checkmark$	
	OLE	$\checkmark$	$\checkmark$	$\checkmark$		$\checkmark$	$\checkmark$
Xref, Block and	Images	$\checkmark$	$\checkmark$	$\checkmark$		$\checkmark$	
attribute	Xref			V	~		$\checkmark$
attribute	Multiple block inserting			$\checkmark$			×
	Attribute (manager, synchronize)	∿*	√*				
	Design center			V			
	Tool Palette	√*	√*	~			
Advanced	Cycle select	√*	-√*	×	$\times$	$\checkmark$	
Auvanceu	File Comapre	$\checkmark$	$\checkmark$	$\checkmark$		×	×
	Parametric drawing	×	×				×
	Express tools	$\checkmark$	$\checkmark$		~	$\checkmark$	×
	3D modeling (Solid, surface, mesh)	$\checkmark$	×		$\times$		×
3D	3D editing		×	~	$\times$	$\checkmark$	$\times$
	Visual styles(Hide & Shade)	$\checkmark$	$\overline{\mathbf{v}}$	~		$\checkmark$	×
	Full LISP support with vl-, vlr-, vla- and vlax- support	-√*	√*	V	$\checkmark$	V	×
Programming	Visual Basic for Applications (VBA)	√*	×	V	×		×
	Script recorder	-√*	-√*	V	V	×	×
	Runtime Extension(ZRX/ARX)	-√*	×	V	V	1	×
	Full Diesel expressions	-√*	-√*	×	×	V	√
	Publish	√	V	1	V	V	1
Outputting	Ploting	√	V	-1	√		1
	Export						


# 2. Interface of ZWCAD+

## 2.1.Locations of the tools

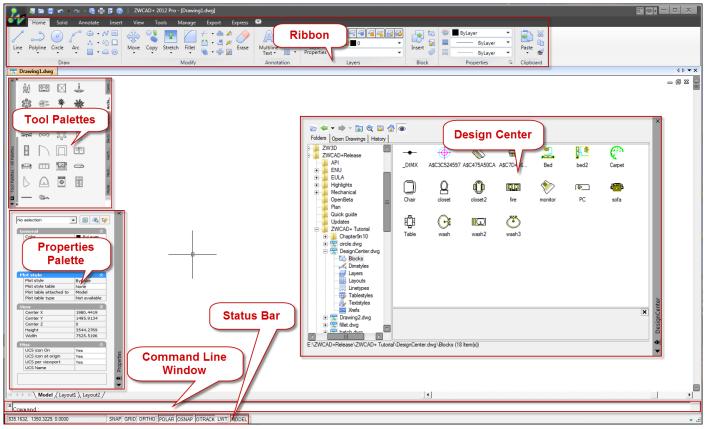

- **Ribbon**Maximize the area available for work using a compact interface that contains many of the same tools and controls available in toolbars and dialog boxes.
- **Tool Palettes** Organize, share, and place tools that are dragged from your drawing onto a tool palette or are provided from third-party developers.
- **Properties Palette**The Properties palette lists the current settings for properties of the selected object or set of objects. You can modify any property that can be changed by specifying a new value.
- **Design Center** With DesignCenter, you can organize access to drawings, blocks, hatches, and other drawing content. You can drag content from any source drawing to your current drawing. You can drag drawings, blocks, and hatches to a tool palette. Source drawings can be on your computer, on a network location, or on a website
- **Command Line Window** Execute a command by entering the full command name or command alias at the command prompt and pressing ENTER or SPACEBAR. When Dynamic Input is on and is set to display dynamic prompts, you can enter many commands in tooltips that are displayed near the cursor.
- **Status Bar** View the coordinate values of your cursor, and access several buttons for turning drawing tools on and off such as the snap mode, grid mode, tracking mode.

# 2.2.Mouse for ZWCAD+

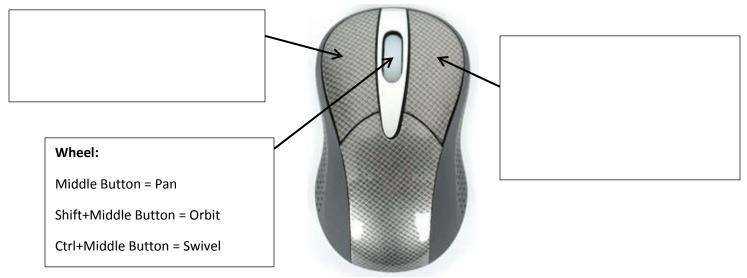

# 2.3.Find your shortcuts in ZWCAD+

#### 2.3.1. Aliases

ZWCAD+ comes with a large number of aliases to help you easily to access the command through command line.

Frequently used aliases:


•	1			
Α,	*ARC	RE,	*REGEN	
ATT,	*ATTDEF	REC,	*RECTANG	
AR,	*ARRAY	Т,	*MTEXT	
В,	*BLOCK	VP,	*DDVPOINT	
С,	*CIRCLE	W,	*WBLOCK	
D,	*DIMSTYLE	Ζ,	*ZOOM	
Ε,	*ERASE			
2.3.2.	Hot keys			
KEY	FUNCTION		KEY	FUNCTION
F1	Help		Ctrl+A	Select all
F2	Text Window		Ctrl+B	Snap
F3	Object Snap Toggle		Ctrl+C	Сору
F4	Tablet toggle		Ctrl+D	Coords
F5	Isoplane switching		Ctrl+E	Isoplane
F6	Coordinate display toggle		Ctrl+G	Grid
F7	Grid toggle		Ctrl+K	Hyperlink
F8	Ortho toggle		Ctrl+N	New

F9	Snap toggle	Ctrl+O	Open
F10	Polartoggle	Ctrl+P	Plot
F11	Object snap tracking toggle	Ctrl+S	Qsave
		Ctrl+T	Tablet
Ctrl+1	Properties palette display toggle	Ctrl+V	Paste
Ctrl+2	Design Center display toggle	Ctrl+X	Cut
Ctrl+3	Tool Palettes display toggle	Ctrl+Z	Undo

# 3. Precision Tools

## **3.1.Coordinate system**

To locate points precisely you can enter coordinates as either Cartesian (Rectangular) or polar coordinates, with both Cartesian and polar coordinates, you can either enter absolute coordinates based on the origin, or relative coordinates based on the last point

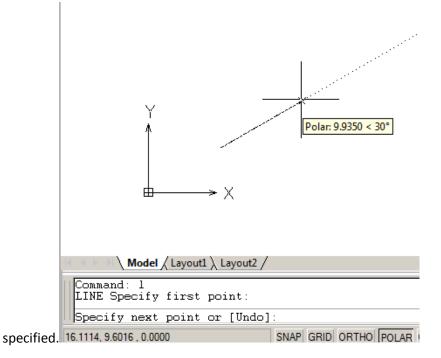


	Absolute	Relative
Cartesian	X,Y(,Z)	@X,Y(,Z)
Polar	Dist <angle< td=""><td>@Dist<angle< td=""></angle<></td></angle<>	@Dist <angle< td=""></angle<>

Example 1:

Command: rectang

 $1^{st}$  point: 70,80  $2^{nd}$  point: @30,40

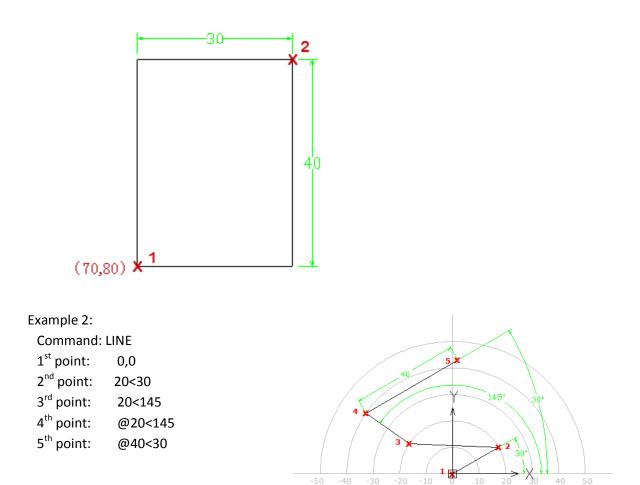

#### Tips & Tricks:

- 1. When polar tracking is on, you can enter a relative coordinate by moving the cursor to specify a direction and input the distance in the command line directly.
- 2. Please note that theUNITS command controls the unit format, choose the one you need.

## 3.2. Object Snap (Snap to the location on objects)

Instead of entering coordinate, you can specify points where the existing objects located on ,such as endpoints of lines and center points of circles in ZWCAD+

## 3.2.1. Access object snap

#### 1. Right-click menu

Hold down Shift and right-click mouse button, theOSNP menu will be shown at your cursor location.

#### 2. Turn on running OSNP

Turn on running OSNPon the status bar, then you can use one or more object snap mode repeatedly at work.

			<u>O</u> n
	*Cancel*		off
	SNAP GRID ORTHO POLAR OSNA	PIO	Settings
Go to OSNAP	Settings, select the object snap	you v	vant to use:

🧑 Drafting Settings	x
Snap and Grid Object Snap Polar Track	cing
✓ Object Snap On (F3)	✓ Object Snap Tracking On (F11)
Object Snap modes	
Endpoint	Select All
	L Perpendicular Clear All
🔿 🗹 Center	♂     ✓       Tangent
🔯 🗹 Node	X Nearest
🔷 🗌 Quadrant	X Intersection
🕑 Extension	O Default
🖉 🗹 Parallel	O Apparent Intersect
	t, pause over the point while in acommand.A n you move the cursor. To stop tracking,
Options OK	Cancel Help

## 3.2.2. Set OSNAP Visualappearance

To help you see and use object snap more efficiently, ZWCAD+ OSNAP displays a marker and tooltip when the cursor is over an object snap location.

A	
Midpoint	

And you can change the setting as you like:


💯 Options			x
Current profile: Default		Current drawing: Drawing1.dwg	
Open and Save         Files         Display           Smartsnap Settings         Imagneti         Imagneti         Imagneti           Imagneti         Imagneti         Imagneti         Imagneti         Imagneti           Imagneti         Imagneti         Imagneti         Imagneti         Imagneti         Imagneti           Imagneti         Imagneti         Imagneti         Imagneti         Imagnetic         Imagnetic	,	er Preferences Profiles Plot Smarttrack Settings © Display polar tracking vector © Display full-screen tracking vector © Display Smarttrack tooltips Alignment Point Acquisition	
Smartsnap Marker Size	<b>.</b>	Automatic     Shift to acguire	
Object Snap Option			
		OK Cancel Apply	Help

# 3.3.Polar Tracking: restrict the movement of your cursor

To make your work more fluently and efficiently, sometimes you need to lock your cursor movement to some specific angle, turn on ZWCAD+ polar tracking and set the angle you want.

🙋 Drafting Settings	x
Snap and Grid Object Snap Polar Tracking  Polar Tracking On (F10)  Polar Angle Settings Increment angle:  45	Object Snap Tracking Settings
90 45 30 22.5 18 15 Delete	<ul> <li>Track using all polar angle settings</li> <li>Polar Angle measurement</li> <li>Absolute</li> <li>Relative to last segment</li> </ul>
Options OK	Cancel Help

Especially if you want to move vertically or horizontally, there is ORTHO on the status bar.

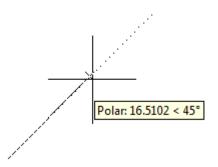


# 4. Create Objects

ZWCAD+ provides a series tools as following to help you create objects conveniently. The key rule is to specify points and enter some necessary values following the command prompts.



#### Example 1: DrawLines

- 1. Click Home tab→Draw panel→Line
- 2. The command prompts you to specify a point, here you can use your pointing device, or you can enter the coordinate values.
- 3. After you specify a point the command will prompt you to specify the next point, and it won't stop until you press ESC key

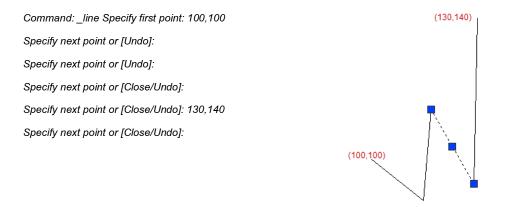


#### Note:

- 1. Here we use once the LINE command and get 4 line segments.
- 2. Closeoption is to join the first and last segments. Undois to get back to previous segments.

 Enter key: 1)Accept the values entered 2) call the previous command again ESC key: cancel or discard the values

#### **Example 2: Draw Circles**

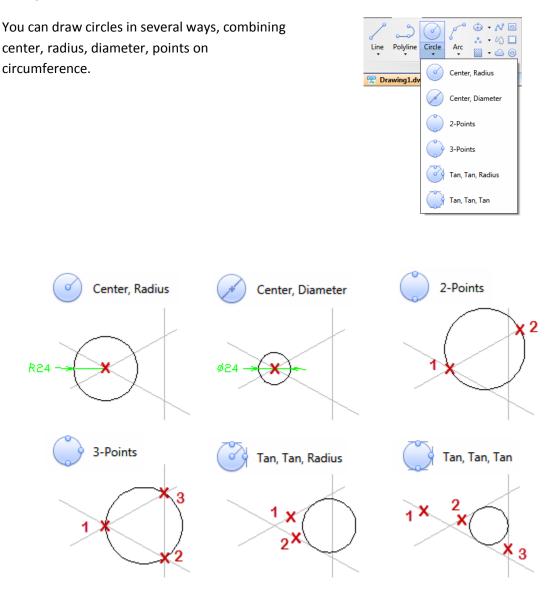


#### **Example 3: Draw Polylines**

A polyline is a connected sequence of straight line segments, arc segments, or a combination of the two, ZWCAD+ creates it as a single object.

Note:

- You can create polyline with various widths in different segments, and you can create a tapering line segment by assigning different values for starting width and ending width.
- If you want to switch to Arc mode, enter a (Arc)at the command prompt, if you want to back to Line mode, enter I (Line).

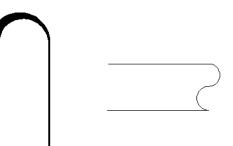

#### Relative command:

- 1. PEDIT All the line segments are treated as a whole, use PEDIT to edit a polyline
- 2. BOUNDARY Createsa boundary (set) from an enclosed area, the boundary could be a region or a polyline.

	Create a polyline (boundary)
🙋 Boundary Creation 🛛 🗙	
Pick Points	
Island detection	
Boundary retention	
Retain boundaries	
Object type: Polyline	
Boundar <u>v</u> set	
Current viewport 💌 🖏 New	
OK Cancel Help	

Use the similar skills as above three examples shown, you can create the other objects listed on the draw panel such as Ray/Xray/Polygon/Rectangle/Arc/Ellipse/spline ect.

# 5. Select and Modify Objects

Except for those basic geometries introduced in last chapter, you can also create more complex objects by editing the existing objects.

## 5.1. Methods to Modify Objects

- **Command Line** Enter a command and then select the objects to modify. Or you can select the objects first and then enter a command. Follow the command prompts you can finish all the procedures.
- **Shortcut Menu** Select and right-click an object to display a shortcut menu with relevant editing options


- **Properties Palette** In Properties Palette, you can specify a new value to modify any property that can be changed. Usually you double-click the object and the properties palette shows.
- **Grips** Select an object to display the grips, and click a grip to make it active, you can activate multiple grips by pressing SHIFT when click them. With those activated grips you can stretch the objects by default, or you can chose the other grip mode by pressing the Enter or Spacebar to cycle through the grip modes: move, rotate, scale, and mirror.

## 5.2.Select objects you want to edit

There are many ways to select objects:


## 1) Use the Pickbox Cursor and select objects one by one


Sometimes it is difficult to select objects that overlap or are close together, in this situation hold down SHIFT and click SPACE to cycle through the objects until the one you want is highlighted, click ENTER to confirm your selection.

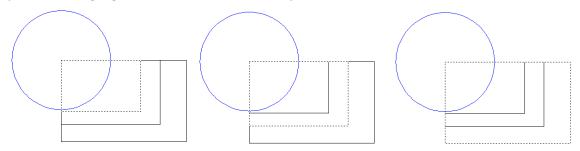


#### 2) Specify a Selection Area and select Multiple Objects


• Window Selection: Drag your cursor from left to right to select only objects that are entirely enclosed by the rectangular area.

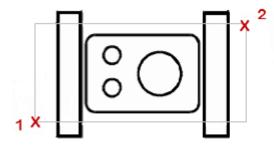

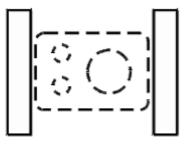



• **Crossing Selection**:Drag your cursor from right to left to select objects that the rectangular window encloses or crosses.

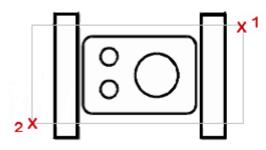

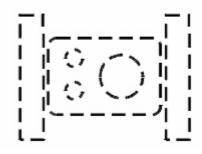

• Selection Fence: select the objects that the fence passes through

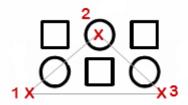

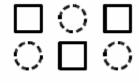


#### 🧧 Tips & Tricks

- ✓ Objects on the locked layers can not be selected unless you unlock those layer
- ✓ You can use QSELECT or FILTER to select objects by property and by object type.
- ✓ You can specify a set of objects as a group, and you can easily select those objects and edit after because ZWCAD+ recognize it as a unit.

## 5.3. Erase objects

There are many ways to delete objects from your drawing and clean up the display:

- ERASE command to delete the objects selected
- PressDELETE key to delete the objects selected
- PURGE command can remove the unused named and unnamed objects such as block definition, dimension style, layers, line types and text styles. Purge can reduce the file size, your work will become easier and faster.

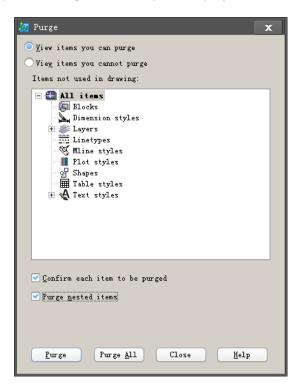

## **5.4.Move or Rotate Objects**

You can move objects to a different location, or change the orientation of objects by rotating them by an angle.




# 5.4.1. Move Objects


To determine the distance and direction of the movements, you can sepecify a base point and destionation point. In this example,

- 1) select the window
- 2) specify the base point for the move
- 3) specify the destination point and the window moved

#### 5.4.2. Rotate Objects

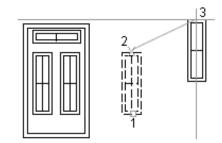


You can rotate objects around a specified base point. To determine the angle of rotation, you can enter the angle value, or using the cursor, or specify a reference angle to an absolute angle.

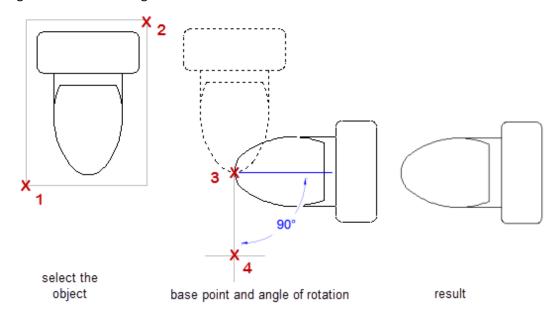

## 5.4.3. Align Objects

You can align an object with another by specify two pairs of points using ALIGN command.

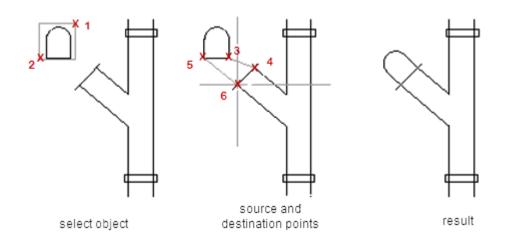


## 5.5.Create identical or similar Objects


There are many ways you can create duplicates of objects in your drawing that either identical or similar to existing objects, and you can locate them in some specific way.


#### 5.5.1. Copy

You can create a single copy or multiple copies at specified distance and direction.

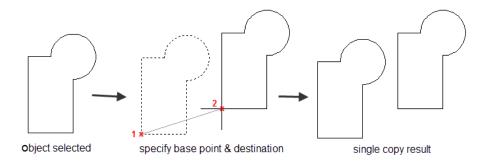

If you want to create multiple copies, you just need to specify multiple destination points.

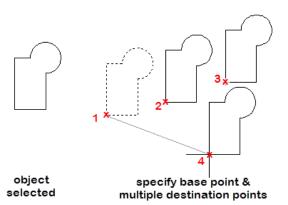

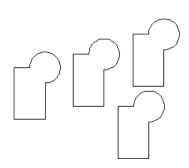

multiple copies result


- Tips & Tricks
  - Copy is a multiple command which will repeat copping the last entity until canceled by Esc. Multiple command you would frequently used such as LINE, OFFSET and so on.
  - ✓ If you want to repeat a command that does not repeat by default, you can press Enter or BlankSpace, or you can use MULTIPLE command to set it repeat by default.

#### 5.5.2. Array

You can create multiple copies of objects that array in rectangular or polar pattern.

In rectangular array, you need to specify the no. of rows and columns, and the row offset and column offset, you can specify by entering the value or by referring points picked on the screen.


💯 Array	×	
Rows:       4       Cglumns:       4         Offset distance and direction         Row offset:       1       4         Column offset:       1       4         Angle of array:       0       4         Image: Column offset:       0       4      <	Rectangular Array       Polar Array         Image: Select objects       0 objects selected         Image: Object select objects       Image: Object select select object select object select object select select object select sel	Igular Array Select objects cts selected
Angle to fill: Angle between iter Set as copied Object base point Set to object's default Base point: X:		Preview Cancel

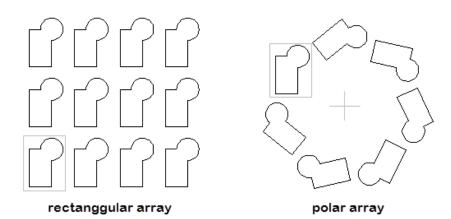

#### 5.5.3. Offset


Offset an object can create new objects whose shape is parallel to the original object.OFFSET could be apply on objects such as arcs, circles, ellipses, elliptical arcs, lines, 2D polylines, rays, and infinite lines.

You can offset an object by specifying a distance, or you can offset an object through a point.

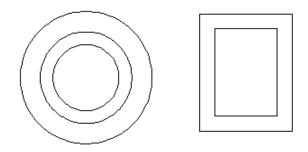

#### 5.5.4. Mirror

The mirror image is symmetrical with the original one. So if you want to create a symmetrical objects, you only need to draw a half one, then create a full one using MIRROR command.

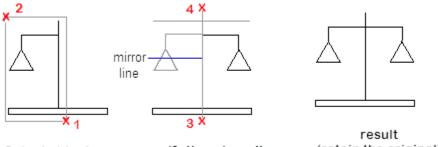

Select objects

specify the mirror line

(retain the original)

To mirror an object you need to specify an axis, you could specify this temporary mirror line by entering two points. And you can choose whether to erase or retain the original objects.


## 5.6. Change the size and shape of objects

There are many ways for adjusting the size or shape of existing objects relative to other objects, both symmetrically and asymmetrically.


## 5.6.1. Trim

You can trim objects so that they end precisely at boundary edges by other objects. When trimming objects, you first select the cutting edges and then specify the objects to trim, selecting them either one at a time or using the fence selection method.

You can trim arcs, circles, lines, unclosed polylines, and rays. In which, arcs, circles, lines, polylines, rays, infinite lines, and viewports on a Layout tab can act as cutting edges..

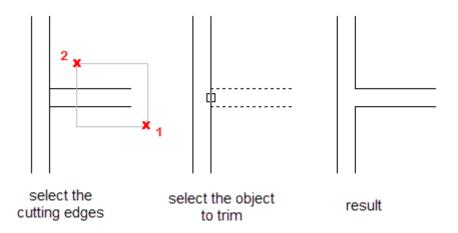


If you do not specify a boundary and press Enter at the Select Objects prompt, all displayed objects become potential boundaries. And an object can be one of the cutting edges and one of the objects being trimmed.

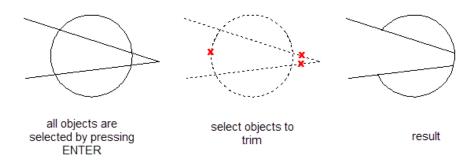


#### 5.6.2. Extend

You can extend objects so they end precisely at boundary edges defined by the other objects. Extending operates the same way as trimming, first select objects as boundary then select objects to extend.

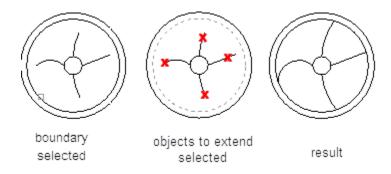

#### 5.6.3. Stretch

You can change the size of objects by stretching them. When stretching objects, you have to specify a base point and displacement point. You should use crossing selection to select the desired objects. Objects that cross the window or polygon boundary are stretched. Those completely within the crossing window or crossing polygon are simply moved. With using grip edition, you can also stretch objects.

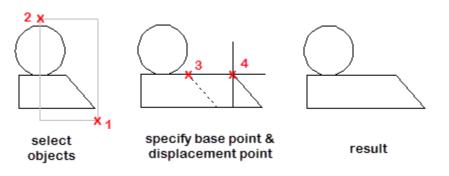



#### 5.6.4. Scale

With SCALE you can enlarge or shrink the existing objects. There are two ways to scale objects:

#### • Using a scale Factor

You can specify a base point and a scale factor, if the factor is greater than 1 it enlarges the object, if the factor is between 0 and 1 it shrinks the object.

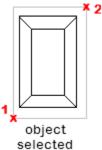

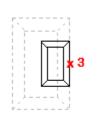



specify the base point & factor=0.5

result

#### • Using a reference distance

You can specify the current distance and then the new desired size, the whole object will enlarge or shrink uniformly refer to the new desired size.

## 5.7. Fillet, Chamfer, Break, or Join the Objects

You can connect two objects with rounded or flattened corners. And you can create or close gaps in objects.


## 5.7.1. Fillet

A fillet connects two objects with an arc that is tangent to the objects and has a specific radius. To fillet the objects, you need to specify the location and the radius. You can fillet Arcs/Circles/Ellipse/Lines/Polylines/ Splines/Xlines.

before fillet fillet radius=100 fillet radius=0


## 5.7.2. Chamfer

A Chamfer connects two objects with a beveled corner. To chamfer the objects, you need to specify the chamfer distances.

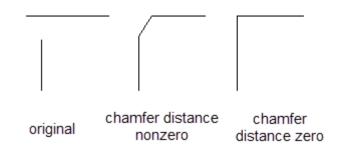

## 5.7.3. Break


You can create a gap in an object, resulting two objects with a gap between them. To break an object you need to specify two break points. By default, the point at which you select the object is the break point. To select a different pair of break points, enter **f** (First) and specify the first break point.

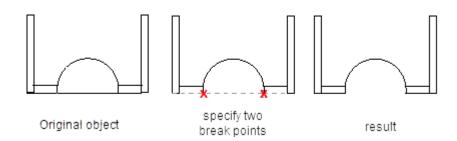

# 6. Work with Layers


Layers in ZWCAD are like the transparent overlays you use in manual drafting. You use layers to organize different types of drawing information.By creating layers, you can associate similar types of objects by assigning them to the same layer. For example, you can put construction lines, text, dimensions, and title blocks on separate layers

- **On /Off** Objects on turned-off layers are invisible, and they do not print.
- **Freeze/Thaw** Objects on frozen layers do not display, do not print, and do not regenerate which speeds up the operations.
- Lock/Unlock Objects on locked layers can not be modified until you unlock the layers.
- Isolate/Unisolate Isolate hides or locks all layers except those of selected objects.

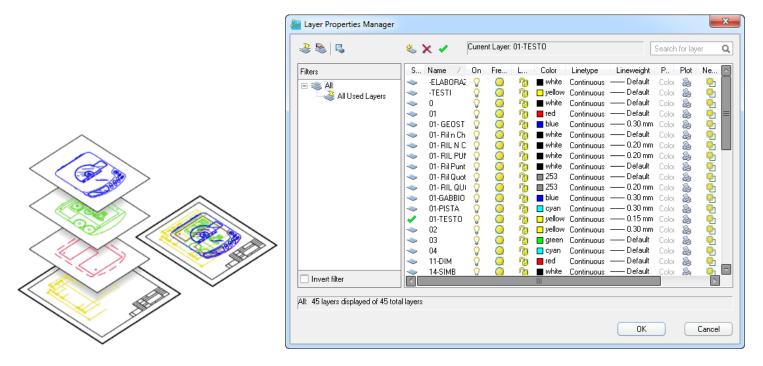

With layer Properties Manager, you can create new layer or edit the properties of selected layer. And you can save layer settings as a named layer states. You can then restore, edit, import, or export the states.

# 7. View (Zoom, Pan, UCS, view)

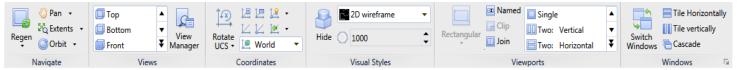

## 7.1.Zoom/pan


Working with CAD you usually need to magnify the details in your drawing for a closer view or shift the view to a different part of the drawing. Both of them only change the view of current drawing, not the real position or size of objects.


ZOOM and PAN are most frequently used command. There are many options for you when pan to reposition the view in the drawing and zoom to change the magnification.

• Pan

When you hold your middle mouse button and move it, it triggers the real-time panning, which enables you to view different part of the drawing.

You can also type the –PAN command to trigger pan by point function, in which you can specify the original point as the first one, and specify a new position for it to pan the whole drawing towards a certain direction and distance.

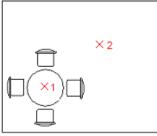

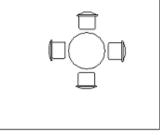


Specify panning points


Result

## • ZOOM


Real-time zoom in and out by scrolling the middle mouse button in drawing area can change the magnification of the view.

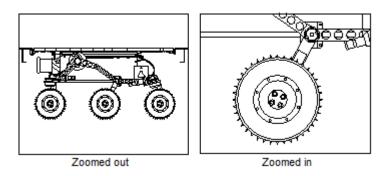

By using Zoom>Window, you can quickly zoom on a rectangular area of your drawing by specifying two diagonal corners of the area you are interested in.

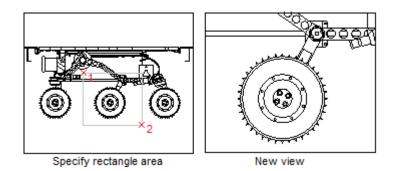

Zoom>Extent can be applied by double-clicking the middle mouse button, by which you can have the whole view of all the objects in your drawing. Besides, Zoom>All can also view all the objects, but if all the objects are inside drawing limit, Zoom>All will show all area the drawing limit.

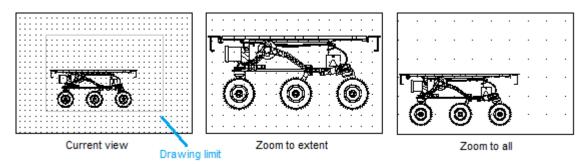

ZOOM>Objects displays a view with the largest possible magnification that includes all of the objects you selected. ZOOM>Previous helps you quickly go back to your last view.

# 7.2.Save and restore views

You can save views by name and restore them for plotting or when you need to refer to specific details. A named view is comprised of specific magnification, location and orientation.

Q Current	🗉 View		Set Current(C)
🛱 Model Views	Camera X	0.0000	
Layout Views	Camera Y	0.0000	New(N)
Preset Views	Camera Z	1.0000	
Тор	Target X	0.0000	Edit Boundary(B)
Bottom	Target Y	0.0000	Delete(D)
Front Back	Target Z	0.0000	Delece(D)
	Roll angle	0.0000	
Right	Height	4086.9711	
SW Isometric	Width	5942.7897	
SE Isometric	Perspective	Off	
NE Isometric	Lens length	50.0000	
NW Isometric	Clipping		
	Front plane	0.0000	
	Back plane	0.0000	
	-		

ZWCAD+ provides a view manager in VIEW command, in which you can save your current view, or restore a named view.

## 7.2.1. Save a View

When you name and save a view, the following settings are saved:


- Magnification, center point, and view direction
- The location of the view: the Model tab or a specific layout tab
- Layer visibility in the drawing at the time the view is saved
- User coordinate system
- 3D perspective and clipping

After saving a named view, you can find it in Ribbon: View tab > Views panel, then scroll the list box to the end.

## 7.2.2. Restore a Named View

Named views can be used to do the following:

- Restore views that you use frequently on the model space viewport or layout viewport.
- Specify the area to plot
- Determined which model space view is displayed when opening the drawing.

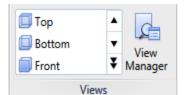

#### **Preset Views**

There are several preset views in ZWCAD+ that can be applied directly by clicking on list of views on Ribbon. It also includes the named views that created by user in this drawing.


#### Tips & Tricks

You can specify a layout view when you open the drawing only if you save the drawing from that specified layout tab.

## **7.3.UCS**

User Coordinate System (UCS) is used for precise positioning of every point in the drawing area. It consists of value of different axis, X, Y and Z, so every point can be identified as (X, Y, Z). In two-dimensional drawing, we only use X and Y axis, so it can be reduced to (X, Y).

In each drawing, you will see a UCS icon at the leftbottom corner of drawing area that defines the origin of the drawing, which is (0, 0).

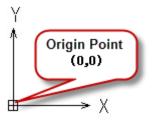


## • WCS

WCS is short for World Coordinate System. It's the default coordinate system of every drawing.

## • UCS

UCS here specifically refers to the coordinate system that customized by user. There are many ways to change the WCS to a certain UCS. You can either rotate the axis, or specify a new origin to it.

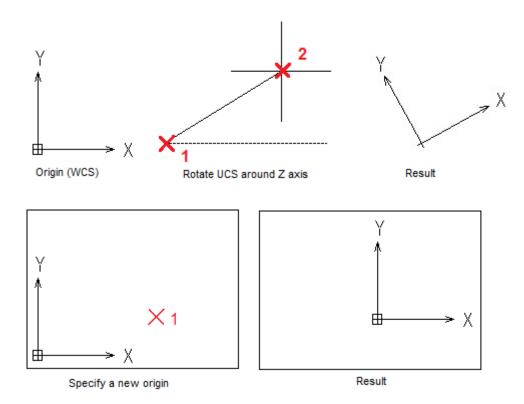

With UCS, we can easily find out the precise position of every point. Such as, we can see the detail coordinate value information of the start point and end point of a line in Properties panel.

	Geometry	
	Start X	887, 1994
2 <b>1</b>	Start Y	555.2652
115	Start Z	0
	End X	1230.117
	End Y	780.8634
	End Z	0
	Delta X	342.9175
	Delta Y	225.5982
	Delta Z	0
	Length	410.4717
	Angle	33


You can also know exactly where your cursor is at the moment, by the real-time coordinate information provided at the left bottom corner of the interface.

× Command : Command :	Specify Specify	opposite opposite	corner: corner:					
Command		Curre	nt position of	f Curso	r			
14.7087, 1	063.3369, O.	0000	SNAP	GRID 0	RTHO POLAR	OSNAP	OTRACK	LWT MODEL

## 7.4.Viewports

In large or complex drawings, displaying different views reduces the time needed to zoom or pan in a single view. Also, errors you might miss in one view may be apparent in the others.

Viewport can be created both in model and layout space. As you make changes in one viewport, the others are updated simultaneously.

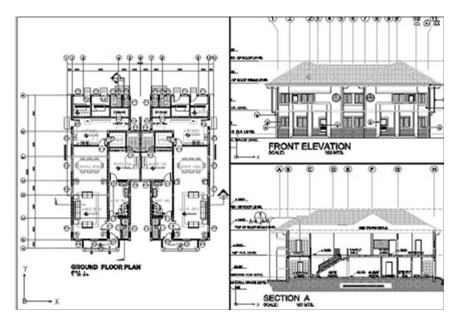

## • Use Model Space Viewports

In model space, you can create viewports that completely fill the drawing area and do not overlap. In Ribbon environment, just turn to View tab > Viewports panel, there is a list box contains all preset viewport settings that can be applied directly.


	Named	🔲 Single	2	
Rectangular	🔛 Clip 🔝 Join	Two:	Vertical Horizontal	• •
	Viev	vports	Tionzontai	

You can also enter Viewports Manager by VPORTS command. Here you can make more detailed settings to your viewports, such as create your own named viewports and specify different views to each viewport.

Mew name:		
Standard <u>v</u> iewports:	Preview	
*Active Model Configuration* Single Two: Vertical Two: Horizontal Three: Right Three: Left Three: Above Three: Below Three: Vertical	*Current*	*Current*
Three: Horizontal Four: Equal Four: Right Four: Left		*Current*
Apply to: Setup:	<u>C</u> hange view to:	
Display 7 2D	▼ *Current* ▼	

#### **Use Layout Space Viewports**

In layout space, you must create viewport to display drawings in model space. It seems like a "window" to see through model space. To create a viewport, you can click the Rectangle button on Ribbon: View tab > Viewport panel to create a rectangle viewport, or use the MVIEW command to do so.

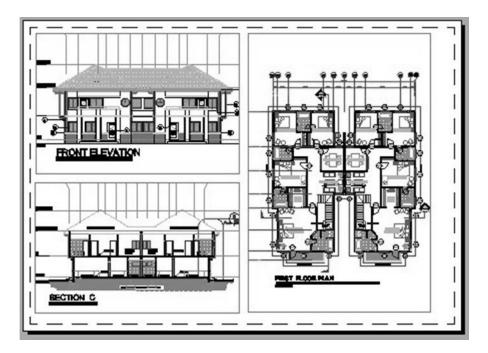


## 💩 Tips & Tricks

You can use MVIEW command to quickly create several standard viewports at once by selecting 2, 3 or 4.

# **7.5.Visual Styles**

Visual style is used in 3D modeling, in order to visualize solid models in different ways, especially in a more life-like appearance.

There are seven kind of visual styles provided in ZWCAD+, which are 2D wireframe, 3D wireframe, Hidden, Flat, Gauroud, Flat with edges, Gauroud with edges. Simply clicking on the gallery with visual styles in Ribbon: View tab > Visual Style panel can apply the chosen visual style in current drawing.

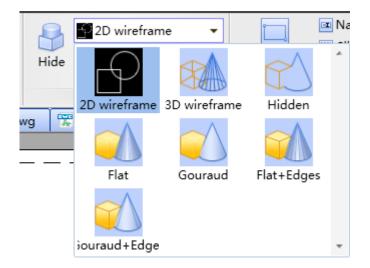

For more details of each Visual Style, please refer to *Chapter 12 – Work with 3D Models*.

# 8. Annotate Drawings

Annotations are notes or other types of explanatory symbols or objects that are commonly used to add information to your drawing. There are many types of objects playing the role of annotations such as dimensions, tolerances, text, tables, hatches, blocks and so on , in this chapter, we will introduce dimension, hatch, text and table.

## 8.1.Hatch and Fills

A hatch object is to highlight an area, or to identify a material by filling the enclosed area or the selected objects with a hatch pattern, solid fill or gradient fill.

To create a hatch object, use the HATCH command, and the Hatch Dialog Box will guide you to finish the whole procedures: select the hatch area, choose the hatch pattern, and set some necessary parameters.


atch Gradient Type and pattern		Boundaries	Boundary retention
Туре:	Predefined	Pick Points	Retain boundaries      Object type:     Polyline
<u>P</u> attem:	ANGLE 💌	Bemove Boundaries	Boundary set
Swatch:		Recreate Boun <u>d</u> aries	Current viewport
Custom pattern:	· · · ·		New:
Angle and scale		Islands Island detection Island diplay:	Gap tolerance Tolerance: 0 units
An <u>a</u> le:	<u>S</u> cale:		
0 💌	1		Options           Image: Associative
Double	Relative to paper space	Normal     Outer     Ignore	Create separate hatches
Spa <u>c</u> ing:	1		Send behind boundary
IS <u>O</u> pen width:	<b>v</b>		Inherit Properties

## 8.1.1. Specify the Hatch and Fill Areas

With ZWCAD+, you can specify the hatch and fills area by choosing an enclosed existing object, or pick a point, ZWCAD+ will calculate the area automatically. A hatch boundary can be any combination of objects, such as lines, arcs, circles, and polylinesthat forms an enclosed area.


## • Hatching in Islands

Enclosed areas within hatch boundaries are called *islands*. You can specify methods of hatching objects in outermost boundary as normal, outer and ignore. Normal is the default hatch pattern.

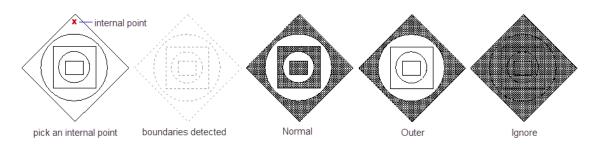

## • Select object for Hatching


To raise the speed of hatching a small area of a complex drawing, you can define a set of objects in the drawing. HATCH does not analyze objects that are not included in the boundary set.

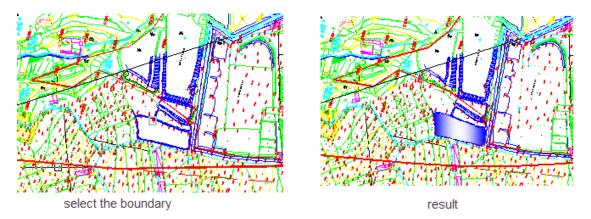


Note: please be sure your hatch boundary is enclosed, or you can set the **Gap tolerance** if the boundary have small gap which you'd like to ignore.

## • Associative Hatches


Associative hatches are automatically updated when their boundary objects are modified. Minor changes in the boundary of an associative hatch do not require erasing and re-creating the

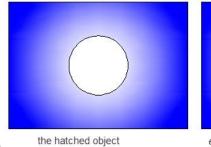

hatch.

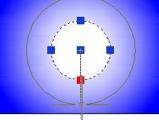

edit the boundary

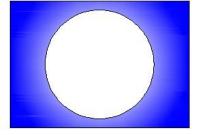

result of the associative hatch

## 8.1.2. Specify the Hatch Patterns


There are two types of hatch patterns and two types of fills

• Predefined hatch patterns

There are about 80 patterns available. You can also use hatch pattern libraries supplied by other companies. Hatch patterns are defined in the *acad.pat* and *acadiso.pat* files.

• Custom hatch patterns

Define a custom hatch pattern definition in a *.pat* file.Setting proper *Scale* value and *Angle*, you can get different appearances with one hatch pattern as following.

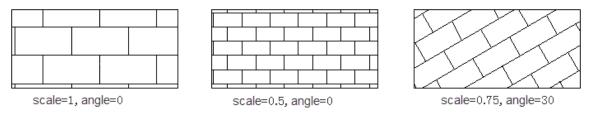

#### Solid fill

Fill an area with a solid color by choosing the SOLID predefined hatch.

#### • Gradient fill

Fill an enclosed area with a color gradient. A gradient fill can be displayed as a *tint* (a color mixed with white), a *shade* (a color mixed with black), or a smooth transition between two colors.




## 8.2.Text

The text you add to your drawings conveys a variety of information. It may be a complex specification, title block information, a label, or even part of the drawing. You can create single-line text(TEXT) or multiline text(MTEXT), depending on your needs.

#### In-Place Text Editor

Below is In-Place Text Editor, with which you can create and edit text .

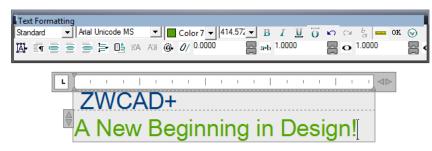

#### • Text Styles

You can customize the text style which determines the text font, size, angle, orientation, and other text characteristics, and save this information for reusing.

Text Style		X
Current Style Name	New Rename Delete	
Text Measurements         Text Height:       0.0000         Width Factor:       1.0000         Oblique Angle:       0	Text Font Name: Arial Style: Regular Language: Arabic Bigfont: (none)	
Text Generation         Print text backwards         Print text upside down         Print text vertically	Text Preview       AaBbCc       AaBbCc       Preview       Apply       OK       Cancel	

#### • Field

A field is updatable text that is set up to display data that may change during the life cycle of the drawing. When the field is updated, the latest value of the field is displayed. The fields are usually data such as Date, FiledName, SheetNumberAndTitles which you expect to change during the life cycle of the drawing.

Field				
Flenane Flesze Hyperlink HyperlinkBase Keywords LastSavedBy Login NamedObject Object Object PageSetupName PaperSize	Title Designer	Admin	USB design Version	1.0.0.1.
PlotSchentation PlotScale PlotStyleTable	Customer	Amy	Filename	Field.dwg
Field expression: %<\Ac\ar Author>%	Last Saved D	late	2012/7/5 1	1-34-21
		ato	2012/7/5 1	
OK Cancel Help			I	X

#### 🧧 Tips & Tricks

When a field is updated, it displays the latest value. You can update fields individually or update all fields in one or more selected text objects.

Go to **Options** dialog box you can set the field automatically update rule. You can set fields to be updated automatically when the drawing is opened, saved, plotted, regenerated, or sent through ETRANSMIT.

Current profile: Defa Open and Save Files		Current drawing: Field.dwg User Preferences Profiles Plot	
Windows Standard Bel		Priority for Coordinate Data Entry <ul> <li>Running object snap</li> </ul>	
Drag-and-Drop scale Default settings when Source conten Millimeters Target drawing Millimeters	Auto update field:	<ul> <li>✓ ETransmit(T)</li> <li>✓ Regen(R)</li> <li>Cancel(C)</li> <li>Help(H)</li> </ul>	
Field  Field  Field  Field  Field	nd of fields te Settings		

## 8.3.Table

A table is an object that contains data in rows and columns. A table object can be created from an empty table or table style. Meanwhile, you also can create table object according to the data in Microsoft Excel spreadsheet.

• You can create table with TABLE command, the *Insert Table* wizard will help you create table with the table style you need.

	🜆 Insert Table			22 S
	Table style Copy of Standard		Insertion behavior Specify insertion point Specify window	
	Insert options Start from empty table From a excel		Column & row settings Columns:	Column width:
Table Style Current Tablestyle: Copy of Standard Styles: Copy of Standard	Preview Preview of: Copy of Standard	Set Current	Set cell style: First row cell style: Second row cell style: All other row cell styles:	1 Line(s)
Standard	Title Header Header Header Data Data Data Data Data Data Data Data	New 2 Modfy 2 Delete 2		
List: All styles	Data Data Data	Help	OK	Cancel Help

• To make modification to a specific cell, click the cell and the content menu will show on the ribbon.

8-	🌄 🗁 🖥	<b>a</b> 🖌	<b>~</b>	- 🖫	÷	1	]			Та	ble Cell	ZWCAD+	2012	Profes	siona	ıl - [	C:\Use	rs\wir	\Desl	top\T	ble.d	wg]				
51	Home So	olid Ann	ot Ins	ert V	/iew	Tools	Mana	ag Ex	cport	Expres Ta	ble Cell															
Insert Above	Insert De Below Re	)elete Row(s)	Insert Left		ert ght	Dele Colur		Me	erge    •	Unmerge Cells	Match Cell	Middle Center •	Cell Border	s												
	Rows				olumr	-			M	erge		Cell Style	s													
🖗 Dra	wing1.dwg	g 📆	C:\\T	able.	.dwg									-												
	~																									
$\sim$	<u>م</u> کر																									
$\leq$		, ° >							_																	
$\propto$			00	2											PI	RIC	EI	.IST	-							
			്പ്	2		~				МАТЕ	ERIAL						•	<b>.IST</b> 10N	•				•	P	RICE	
		1000	°0,9//	2		~					ERIAL	SLI	P JOIN	IT RE	D	ISC	RIP1	ION		)/8" T	01	1/8"		P	RICE 15	
		1000	°0,9//	2		~		>		5(		SLI		IT RE	D	ISC	RIPT BUC	ION T FF	ROM (			1/8"		P		
		1000	00	2		~		>		50	01	SLI	SLI		D VEA	ISC L'AI	RIPT DUS	ION T FF	ROM : ST F	ROM		1/8"		P	15	
	0.00	0, 1 1600	00	2		~		•		5( 5( 5(	01	SLI	SLI SLI	- JOI	D VEA NT R NT R	ISC LAC EVE EVE		ION T FF IDJU	COM : ST F	ROM ROM		1/8"		P	15 20	


• To make a modification to the text in the cell, just double-click the text, you will get the text editor.

Text Formatting		
Standard 🗨 Ar	al 🗾 🖬 ByBloc 🗨 0.1800 💌 🖪 🛛 💆 🚺 🖌	୦ ମଧ୍ୟ 🦉 💳 ୦K 🎯
<b>X</b> 6 6 8 8	i⇒ Di sa as @ 0/ 0.0000 as as 1.0000	• 1.0000
	PRICE LIST	
MATERIAL	DISCRIPTION	PRICE
501	SLIP JOINT REVEAL ADJUST FROM 5/8" TO 1 1/8"	15
502	SLIP JOINT REVEAL ADJUST FROM	20
503	SLIP JOINT REVEAL ADJUST FROM	22
504	SLIP JOINT REVEAL ADJUST FROM	45


## **8.4.Dimension**

Dimension is the process of add measurement annotation to a drawing, you can create dimensions for a variety of object types in many orientations, and you can control their appearance by setting up dimension styles or by editing individual dimensions.

Dimensions indicate the measurement values of objects (e.g. length or width), distance or angles among objects, or the distance between feature point and the specified origin. You can create dimensions that can be horizontal, vertical, aligned, rotated, coordinate, baseline, or continued.

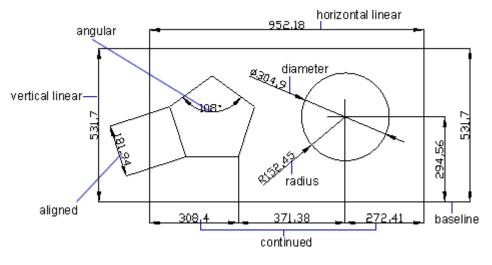

Create Dimension

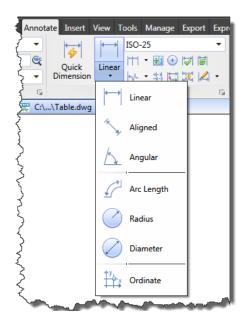


From *Annotate* Tab, you can fins *Dimensions* Panel which provides dimensioning for a variety of objects types in many orientations, such as Linear, Radial, Angular, Ordinate, Arc Length and so on.

🙋 Tips &Tricks

*Associative dimensions* can automatically adjust their locations, orientations, and measurement values when the geometric objects associated with them are modified. Dimensions in a layout may be associated to objects in model space. The DIMASSOC system variable is set to 2.

#### Dimension Style Manager

You can control the appearance of dimensions by changing the dimension styles, including arrowhead style, text location, and lateral tolerances and so on.

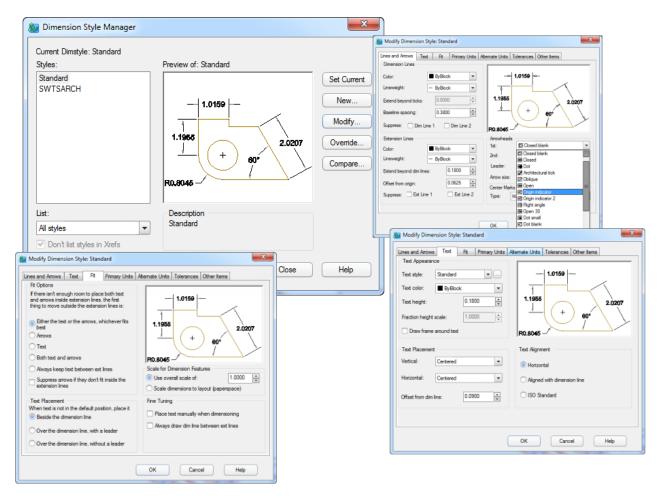

# 9. Block

## 9.1.Create and insert blocks


A block can be composed of objects drawn on several layers with various properties.

#### Create a block

We can create block by command Block and WBlock. Command Block is used to create block within a drawing. Define a block via the dialog box:

- 1. Name the block
- 2. Specifies an insertion base point for the block.
- Specifies the objects to include in the new block 3.

Command WBlock is used to create drawing files for use as blocks.

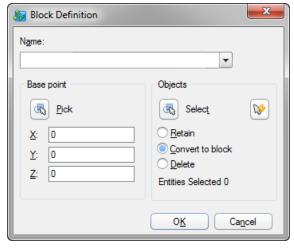

🜆 Write Block		×
Source           Block:           Entire drawing           Qbjects           Base point           Image: Pick point           X:         0           Y:         0           Z:         0	Objects       Objects       Image: Select objects       Image: Select objects       Image: Select objects       Image: Select object o	*
Destination File name and path: Insert units: Millimeters	OK Cancel !	▼ ▼



#### Insert a block Insert


After a block is created, it can be used in the drawing by Input the information in Insert dialog box: command Insert.

- 1) Select the block from the list.
- 2) Specify the insertion point, scale, and rotation
- 3) Click OK.

Insert  Block name From file:  Path:		Browse
Insertion point       Specify On-screen       X:     0       Y:     0       Z:     0	Scale Scale Specify On-screen X: 1  Y: 1  Z: 1  Uniform Scale	Rotation Specify On-screen Angle: D Block Unit Unit: Unspecified-Unitles: Factor: 1
Explode block upon insert	ion	Insert Cancel


#### 🙋 Tips & Tricks

In the 'Insert Block' dialog box, you can insert a drawing as block by the option 'From file'. Except commands Block and WBlock, you can also insert block from design center or tool palettes, by dragging the block into the drawing.

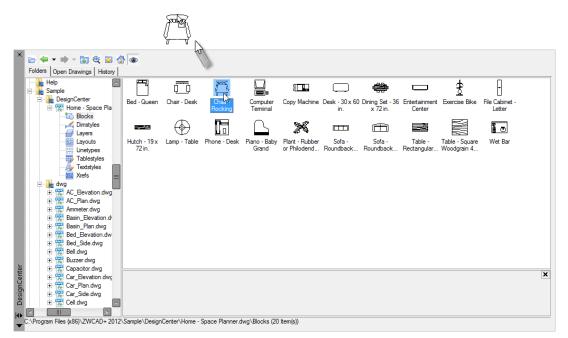

## 9.2.Block with attributes

An attribute is a label or tag that attaches data to a block. Examples of data that might be contained in an attribute are part numbers, prices, comments, and owners' names.

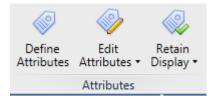

To create an attribute block, you need to create the attribute by command attdef, then use command Block/WBlock to select the geometric object together with the attribute object.

🌆 Define Attribute			×
Tag: Tag Prompt: Promp Default text: Value			
Insert Coordinates	1012 0440		
<u>X</u> : <u>4885.7475</u> ▲	<u>Ү</u> : -1913.6448		<u>S</u> elect >
Attribute Flags	Text		
<u>H</u> idden	T <u>e</u> xt style:	Standard	-
Fixed	Justification:	Left 💌	
<u>V</u> alidate Defined	Text height:	2.5	Select >
Lock position	Rotation:	0	Sele <u>c</u> t >
<u>M</u> ultiple Lines	Boundary <u>w</u> idth:		Select >
?	Define	e Define <u>a</u> nd Exit	Cancel

When you insert a block that has a variable attribute, you are prompted to enter data to be stored with the block.

~

You can change the attribute value of the block by double click the attribute block, or command attedit.  $\square$ 

M Enhand	ced Attribute	Editor						^
Block: Tag:	_AXISO A					Select b	lock	<b>R</b> 3
Attribute	Text Options	Properties				A.		
Tag A	Pro	mpt	Value A					
Value:	A							
		Apply	ок	Car	icel		Help	

# 10. Share Data: xrefs, dwf, images

## **10.1.** About External Reference



drawing to the current drawing as a referenced drawing. With xrefs, changes made in the

referenced drawing are reflected in the current drawing.

Attached xrefs are linked to, but not actually inserted in, another drawing. Therefore, with xrefs you can build drawings without significantly increasing the drawing file size.

## **10.2.** Attach External Reference

There are two ways to insert external reference into the drawing. You can use command XAttach, or use External Reference Manager.

When using command XAttach to insert xrefs, you can specify the insertion scale, position and rotation angle in the dialog box.

log External Reference		<b>X</b>
-	n Files (x86)\ZWCAD 2012 Eng\Sample n Files (x86)\ZWCAD 2012 Eng\Sample	-
Reference Type		Path type
Attachment	Full path 💌	
Insertion point           ✓ Specify On-screen           X:         0.00           Y:         0.00           Z:         0.00	Scale         Specify On-screen           X:         1.00           Y:         1.00           Z:         1.00           Uniform Scale	Rotation Specify On-screen Angle: 0
	OK Cancel He	ql

To attach External Reference by External Reference Manager, input command XRef or click XRef button from the ribbon menu. Click Attach button to browse a drawing as external reference, specify the scale, position and rotation angle in the dialog box.


🙀 Xref Manager						×
Reference Name	Status	Size	Туре	Date	Saved Path	Attach
🖺 Arch-1	<ul> <li>Loaded</li> </ul>	76KB	Attach	2009/12/	E:\Program Files	
						Detach
						Reload
						Unload
						Bind
$\checkmark$					>	
Xref Found At						
					Save Pat	h Open
			C	ОК	Cancel	Help
-	° 🏸					
At	tach Adjust	Clip				

# **10.3.** Attach image

You can attach a raster image file to a drawing file using ImageAttach or Image Manager. ZWCAD+ support image formats includes bmp, ecw, gif, jpg/jpeg, pcx, png, tga, tif/tiff.

Images

When you attach an image file, you link that referenced file to the current drawing. Any changes to the referenced file are displayed in the current drawing when it is opened or reloaded

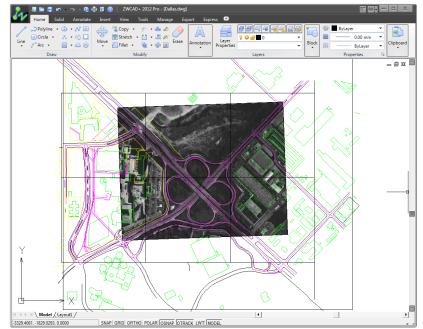

When using command ImageAttach to attach images to the drawing, you can specify the insertion scale, position and rotation angle in the dialog box.

🌆 Image		×					
Name: Dallas		Browse					
Found in: E:\Program Files (x86)\ZWCAD 2012 Eng\Sample\Dallas							
Saved path:							
Insertion point	Path type	Rotation					
Specify on-screen	Full path 💌	Specify on-screen					
X: 0	Scale	Angle: 0					
Y: 0	Specify on-screen						
Z: 0	1						
ОК	Cancel Help	Details >>					

You can also attach raster image by Image Manager, inputting command Image to open the Image Manager Dialog box, click Attach button to browse raster image, specify the insertion scale, position and rotation angle in the dialog box. With Image Manager dialog box, you can also detach, reload, unload or save the path of the raster image.

🜆 Image Manager						×
Image Name	Status	Size	Туре	Date	Saved Path	Attach
SpaceStation_2	Unrefere	92kB	JPG	2011/10/	E:\Program Files	
						Detach
						Reload
						Unload
						Details
Image found at						
					Browse	Save <u>P</u> ath
				ОК	Cancel	Help

#### 🧧 Tips & Tricks

You can use command ImageClip to crops the display of a selected image to a specified boundary, use command ImageAdjust to controls the image display of the brightness, contrast, and fade values of images.

# 11. Plotting and publishing drawings

Plotting is to have a paper printout of the electronic drawings. You can specify what and how to express your drawing content in a dedicated way by the settings before plotting. Publishing is to publish an electronic sheet set once in a time for later viewing/printing/exchanging/uploading. You can modify the sheet set by the publish manager.

# **11.1.** Plotting drawings using plot manager

The plot manager will guide you step by step to do your plot job by the following instructions. Open the plot manager from the ribbon tab Export|Plot or the classic menu File|Plot...

age setup		Plot style table	e (pen assignments)	
Name: <pre></pre>	<b>Add</b>	Monochrom	e.ctb 💌	
rinter/plotter		Shaded viewp	ort options	
Name: 🛛 🖙 HP LaserJet 1020 on 192.168.0.208	(redirected 2)  Properties	. Shade plot	As displayed	
Paper size: A4		kQuality	Normal	-
Number of copies: 1	-	DPI DPI	300	
Where: T5008 Description:		Plot options Plot in base Plot objections	ct lineweights	
Description:		Plot obje	ct lineweights plot styles	
Description: Plot to file lot area	Plot scale	Plot mith     Plot pape	ct lineweights plot styles	
Description: Plot to file Iot area What to plot:	Fit to paper	Plot with     Plot with     Plot pape     Plot stam	ct lineweights plot styles erspace last erspace objects ip on	
Description: Plot to file lot area What to plot:	Fit to paper	Plot with     Plot with     Plot pape     Plot stam	ct lineweights plot styles erspace last erspace objects	
Description: Plot to file Not area What to plot: Window Vot offset (origin set to printable area)	Fit to paper	Plot and     Plot objev     Plot objev     Plot pape     Plot pape     Plot stam     Save cha      Drawing orient	ct lineweights plot styles erspace last erspace objects ip on inges to layout	
Description: Plot to file Not area What to plot: Window Window Window	Fit to paper Scale: 1:1	Plot and     Plot objev     Plot objev     Plot pape     Hide pape     Plot stam     Save cha	ct lineweights plot styles erspace last erspace objects up on unges to layout tation	

### 11.1.1. Page setup

A page setup is a series of settings stored as one named item shown on the top of the plot manager dialog, which saves all settings on the plot manager for future reference. You can use a named page setup whenever you want after saving. Click Add... to save the settings currently shown on the page and select one of them from the drop-down list. The page setup named None is generally used by default.

age setup			
	H	1.16	
Name:	<none></none>	<b>*</b>	Add

**11.1.2. Printer/plotter settings** Specify the options below

Printer/plotter			
Name:	🖶 HP LaserJet 1020 on 192.168.0.208 (redirected 2)	-	Properties
Paper size:	PNone PHP LaserJet 1020 on 192.168.0.208 (redirected 2) Physical Send To OneNote 2010 (redirected 2)		-) 210 MM K
Number of co	Microsoft XPS Document Writer (redirected 2)	=	-297
Plotter:	Adobe PDF (redirected 2)		MM 76
Where:	T5008		l lī
Description:			L J×
🗌 Plot to file			

- 1) Select one device from the drop-down list to output your drawing.
- 2) Select one paper size you want the drawing to be put onto.
- 3) Specify the numbers of copies you want for this time.

### 11.1.3. Plot area and scale options

Select one option to specify the plot area from the drop-down list.

ot area		
What to plot:		
VDisplay Extents	•	Window<
Layout		
Window		

- Display: Prints all objects in the current view of your ZWCAD+ drawing area
- Extents: Prints all objects in the drawing.
- **Layout**: Prints all objects within the paper area specified in the paper space. This option is only available from a Layout tab.
- **Window**: Prints objects you will define in a rectangular window. Select the Window option, and then respond to define the area.

#### **11.1.4. Other options**

• Drawing orientation:

Determines whether the position of the printed drawing is landscape or portrait. You can also choose to plot upside-down.

_
A

• Plot scale:

Controls how much the entire drawing will be scaled on the printout. Usually check Fit to paper for convenience to have all ready-to-print objects included in the printable area.

-	paper		
Scale:	1:1		•
	1	mm =	
	1	unit	


• Plot offset:

Changes the position of the printable area relative to the lower-left corner of the default area of printer. Usually check Center the plot for convenience.

Plot	offset (origi	n set to print	able area)
X:	30.59	mm	Center the plot
Y:	0.00	mm	


• Plot style table:

Specifies how the objects in the drawing will appear. Usually select None if you don't need it.

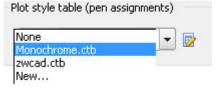

#### • Shaded viewport options:

Chooses whether to plot 3D objects in wireframe, hidden mode, a visual style, or rendered.

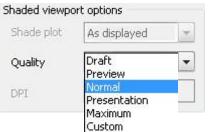

• Other options to customize your printout at ease.

Plot options
Plot in background
🐨 Plot object lineweights
Plot with plot styles
💽 Plot paperspace last
Hide paperspace objects
Plot stamp on
Save changes to layout

### **11.1.5.** Layouts in paper space

A layout in paper space is a virtualized sheet of paper with all settings specified already. It represents a drawing sheet in appearance and can be modified/published/added once initialized.

🤶 🦣 🖿 🖬 🗠 - 🖓 - 🕅 🖷	a 🏗 🔞 🕴 ZWCAD+ 2012 Pro (Beta) - [Drawing1.dwg] 🛛 📰	<u>⊛</u> • = □ ×
Home Solid Annotate Insert	View Tools Manage Export Express 📼	
• ? • 🖾 • 🐸 🕘 • • •	Annotation Properties	r 🝷 Clipboard
Draw Drawing1.dwg	Layers Properties	
Drawing1.dwg		17 17
	A layout in paper space is a virtualized sheet of paper with all settings specified already.	]
×Command: Command: _pagesetup		
Command :		
13.2983, -0.2139, 0.0000	SNAPI GRIDI ORTHOI POLAR IOSNAP OTRACK LWT PAPER	S .

To initialize a paper layout, just click the layout tab and choose Page setup manager.



Click Modify to start it over as described in the chapter Plotting drawings using plot manager.

Current	lavout: Lavout2	Page setup	<none></none>	Ste.	Plot style table (pen as	signments)
Page setups Current page se		Printer/plotte Name:		Properties	Display plot styles	
*Layout1* *Layout2*	Set Current New Modify Import	Paper size: Plotter: Where: Description:	Letter (8.50 x 11.00 Inches) None Not applicable The Jayout will not be plotted unless a m configuration name is selected.	ew plotter	Shade plot As dis Quality Norma DPI Plot options	l
Selected page se Device name: Plotter:	None None	Plot area What to plot Layout	t:	Plot scale Fit to paper Scale: 1:1	Plot object intervet     Plot with plot style     Plot paperspace la     Hide paperspace o	s st
Plot size: Where: Description:	8.50 × 11.00 inches Landscape Not applicable The layout will not be plotted unless a new plotter configuration name is selected.	Plot offset (o X: 0.0000 Y: 0.0000		1 inch = 1 unit Scale lineweights	Drawing orientation Portrait Landscape Plot upside-down	A

# **11.2.** Publishing a sheet set of drawings using publish manager

Publishing is to create a drawing sheet set by the publish manager. No matter in paper or electrically, the publish manager assemble a collection of drawings to be customized for your purpose.

Sheets to publish 🔃 🔛 🔛 🔛 🗁 📄	Include plot stamp	Number of copies:
Sheet Name	Page Setup	Status
Unsaved Drawing-Model	CDefault: None>	Victure Victur
Unsaved Drawing-Layout1	Contract: None>	
😴 Unsaved Drawing-Layout2	CDefault: None>	Vo errors
Publish to	Inc	clude when adding sheets
Publish to PDF		clude when adding sheets

### 11.2.1. Publishing drawings using publish manager

The publish manager will help you collect drawing sheets and configure to get ready for publishing. Open the publish manager from the ribbon tab Export Publish

	🗁 🗄 🔍 🗆 Inc	clude plot stamp	Number of copies:
Sheet Name	Page	Setup	Status
Consaved Drawing-Model	😭 <de< td=""><td>efault: None&gt;</td><td> No errors</td></de<>	efault: None>	No errors
Winsaved Drawing-Layout	Add Sheets Load List Save List Remove Remove All Move Up Move Down		Vo errors
Publish to	<u>R</u> ename Sheet Change <u>P</u> age Setup		adding sheets
PDF	Copy Selected Shee	ts tab	💽 Layout tabs

- ✓ Add drawings and sheets from the button Add Sheets ↓
- ✓ You can modify the list of sheets in the dialog box by adding/removing/reordering/renaming from the buttons on the page is the right-click menu;
- ✓ When your list of drawing sheets is assembled and configured, click the Publish button to start publishing
   Publish

### 11.2.2. Configuring publish options

General PDF Option: Type Single File Nameing Ordere Name	Default output direc	tory (Plot-to-file)	
Type Single File Nameing Ordere Name	C:\Users\Adm	inistrator\Documents\	
Nameing Ordere Name	General PDF Option	α	
	Туре	Single File	
	Nameing	Ordere Name	
Name Drawing1	Name	Drawing1	
Layer information Don't include	Layer information	Don't include	

- Default output directory: Specifies where to put the generated PDF file by default.
- **General PDF option**: Specifies whether a single-sheet PDF or a single multi-sheet PDF is generated for the listed drawings and whether to have layer information included or not.

# 12. Work with 3D Models



## 12.1. Create 3D Models

ZWCAD+ supports several kinds of 3D entities, including solids, surfaces and meshes. In Ribbon environment, you can work with all 3D functions in Solid tab.


### **12.1.1. Solid Primitives**

There are 6 kinds of solid primitives that can be created directly. In Solid tab > Primitive panel, they are Box, Cylinder, Sphere, Wedge, Cone and Torus.

To create a Box, it's better to change the view to Isometric View first. You can choose one of them in Ribbon: View tab > Views panel, such as SW Isometric.


• BOX

Click the Box button or enter BOX command to start creating a box. First, you need to specify the corner of the bottom face of the box, and then specify the other corner of the bottom face. Finally, specify a length as the height of the box.

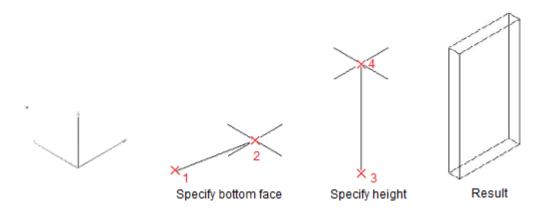

• Torus

Click the Torus button or enter TORUS command to start creating a torus. First, you need to specify the radius of the whole torus, and then specify the radius of tube (thickness of torus).

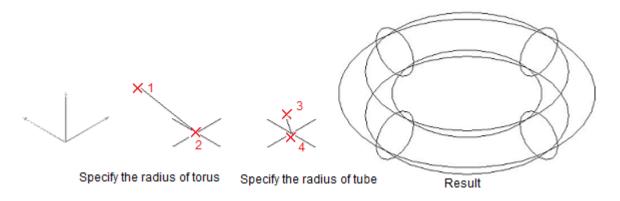


Creating Cylinders, Spheres, Cones, Wedges are all similar with above. You can follow the command prompt to create them yourself.

### 12.1.2. Create Solid from 2D profiles

Besides creating solid by preset primitives, you can also use other ways to create specifically-shaped solids.


• Extrude

You can extrude a closed polyline or region to a 3D model by using EXTRUDE command (On Ribbon: Solid Tab > Solid Panel). First, you need to draw a closed polyline or convert a closed area to region. Then, use EXTRUDE command, and specify the length of extrusion and taper angle.

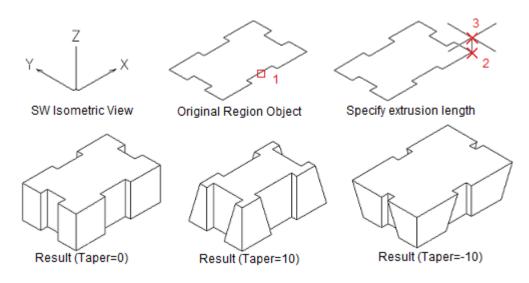

#### • Revolve


REVOLVE command (on Ribbon: Solid Tab > Solid Panel) is used for creating 3D solid or surface by sweeping an object around an axis. First, you need to draw a profile that you want to revolve. Then, use REVOLVE command, and specify the axis and revolve angle. Open profiles create surfaces and closed profiles create solids.

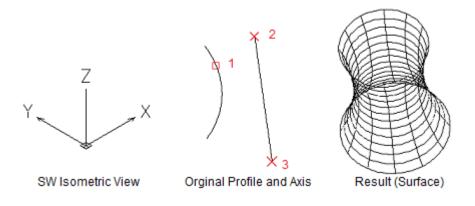

#### **12.1.3. Create Mesh Primitives**

Mesh object provides enhanced capabilities for modeling object shapes in a more detailed way. It provides the ability to edit the grips directly.

Creating mesh primitives is similar like creating solid primitives. You can find them on Ribbon: Solid Tab > Mesh Panel.

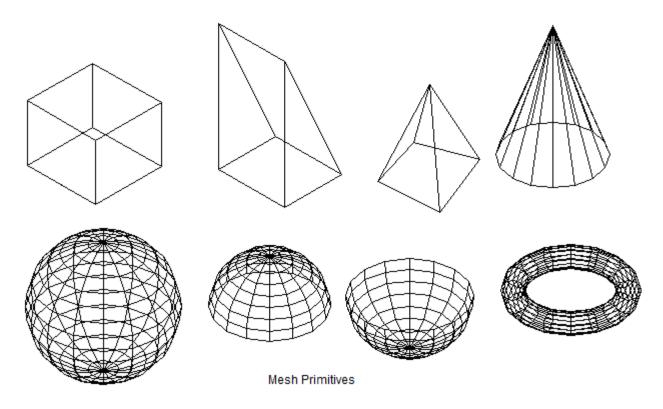


# 12.2. Modify 3D Models

There are many 3D editing tools to make your solid models become what you want. Including Boolean Calculation, Solid Editing and 3D Operation (All on Ribbon: Solid Tab).


## 12.2.1. Boolean

Boolean operations are used for combining multiple solids or regions. There are three kinds of Boolean operation which are Union, Subtract and Intersect.


Union operation combines selected 3D solids or 2D regions by addition. Just use UNION command and select all the objects you want to union and press Enter.

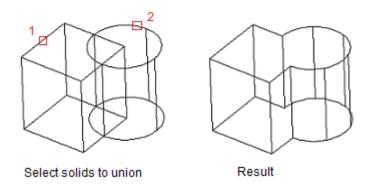

Subtract operation combines selected 3D solids or 2D regions by subtraction. Use SUBTRACT command, select the solids that you want to keep, press Enter, then select the objects that you want to subtract.

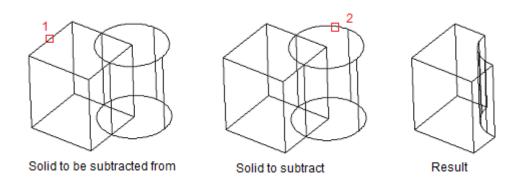

Intersect operation creates a 3D solid or 2D region from overlapping solids or regions. Just use INTERSECT command and select all the objects you want to intersect and press Enter.

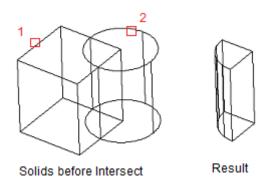

### 12.2.2. Solid Editing

SOLIDEDIT command includes the methods to edit bodies (solids), faces and edges, which are all placed on Ribbon: Solid Tab > Solid Editing Panel.


With this command, you can imprint, separate, shell, clean, and check the validity of the entire 3D solid object (body).You can extrude, move, rotate, offset, taper, copy, delete, and assign colors and materials to faces. You can also copy and assign colors to edges.

You cannot use SOLIDEDIT with mesh objects.

Here shows some example to use SOLIDEDIT.


### • Body Shell

Shelling creates a hollow, thin wall with a specified thickness. You can specify a constant wall thickness for all the faces. You can also exclude faces from the shell by selecting them. A 3D solid can have only one shell. New faces are created by offsetting existing ones outside their original positions.

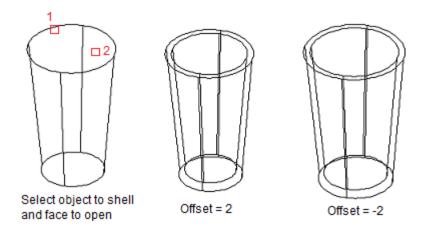


### • Face Extrude


Extends a 3D solid face in the X, Y, or Z direction. You can change the shape of the object by moving its faces.

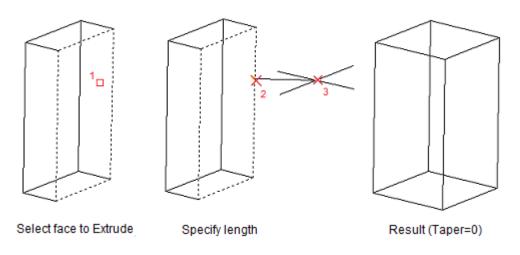

• Edge Copy:

Copies selected edges on a 3D solid as 2D arcs, circles, ellipses, lines, or splines.

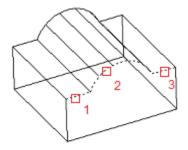

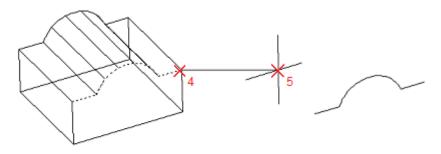

Select edges to Copy

Specify displacement

Result (Lines and Arcs)


## 12.3. View 3D Models

You can view your 3D models in different way in order to suit different situation.

### 12.3.1. 3D Orbit


3D orbit is to rotate the view in 3D space, so that you can view the model from different angle and face, just like you watch an object around in the real world. It's very helpful for you to see the whole picture of your 3D models.

After starting 3DORBIT command, you can move the cursor inside the orbit loop, hold your left mouse button and move around to orbit the model freely.

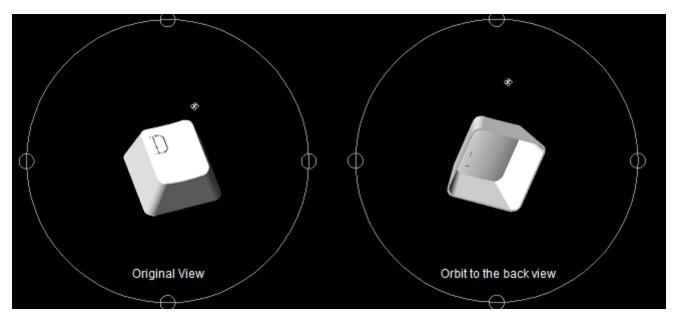

You can also move your cursor into the small circle positioned at each quarter of the orbit loop, in which

the cursor will change its icon to: P. It means that when you rotate the view here, you can rotate with a certain virtual axis that is tangent to the big orbit loop.

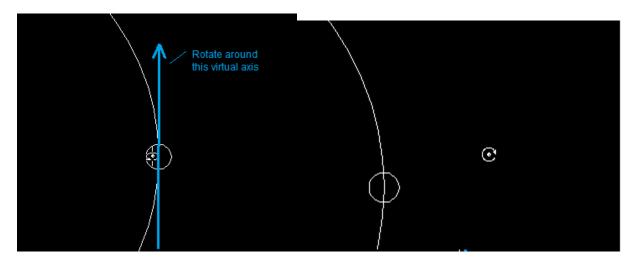


If you move your cursor outside the big orbit loop, you can rotate the view in the plan of screen, which means the rotate axis is perpendicular to your screen.

You can also right-click in the drawing area to show the 3D orbit contextual menu, in which many extra functions are provided. Such as you can choose More > Continuous Orbit, and then drag your mouse for a short distance and release, then you will find the view starts to orbit itself continuously and automatically.

### 🧧 Tips & Tricks

The faster you drag, the faster the Continuous Orbit will be.

Another useful function in this contextual menu is switching between Parallel and Perspective View. You can choose Projection > Perspective to switch to the Perspective view, which is more like how you see things in the real world.

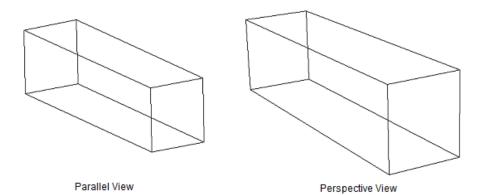


### 12.3.2. Visual Styles

A visual style is a collection of settings that control the display of edges, shading, and shadows of 3D solids and surfaces in the current viewport.

In ZWCAD+, you can switch among different visual styles easily with Ribbon. In View Tab > Visual Styles Panel, there is a drop-down list box with all visual styles listed with previews.

There are 7 visual styles provided, which are:

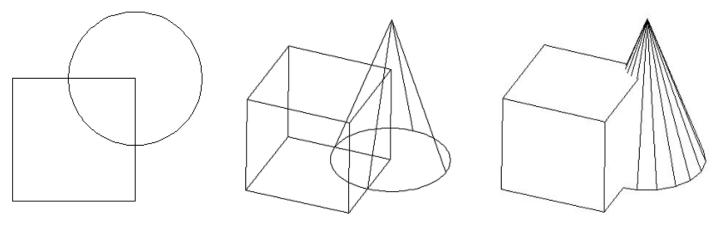


2D Wireframe

3D Wireframe

Hidden

- **2D Wireframe**. Normally used for 2D drafting and editing. Objects are displayed with only edges without shading.
- **3D Wireframe**. Similar to 2D Wireframe but for 3D modeling. Operate with 3D models in this style is smooth and fast, so it's very suitable for most 3D modeling work.
- **Hidden**. Objects displayed with only visible edges, and without shading, either. Edges that hidden behind or inside objects will not be displayed, which is very suitable to see the outlines of models. But if your 3D models are too complicated, using Hidden style might affect your operation speed.

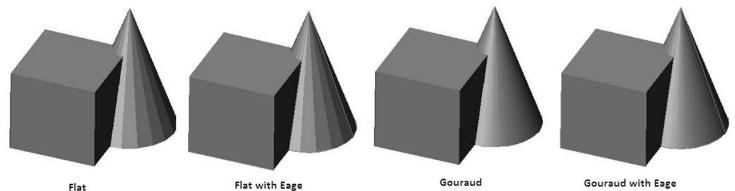

• **Flat**. Objects displayed without edges, but with simple shading. Surfaces displayed in this style are not smooth but all flat

- Flat with edges. Similar to Flat style, but with edges.
- **Gouraud**. Object displayed without edges, but with higher quality shading. Surfaces displayed in this style are smooth. It's very suitable for final viewing of your models.
- **Gouraud with edges**. Similar to Gouraud style, but with edges.